

These instructions are applicable for the following pressure-reducing regulators: KPR, KCM, KCP, KCY, KPP, KPF, KHP, KLF, KHf, and KHR series.

Kit Contents

Inlet filter (5)

Tool Requirements

Filter insertion tool

Filter pick tool


CAUTION


Before servicing any installed regulator you must depressurize the system and purge the regulator.

1. Remove the old **inlet filter** from the **inlet port (marked 'HP')** using the **filter pick tool**. Discard old filter.

NOTICE

Be careful not to scratch the sides of the inlet port. Leakage could result.

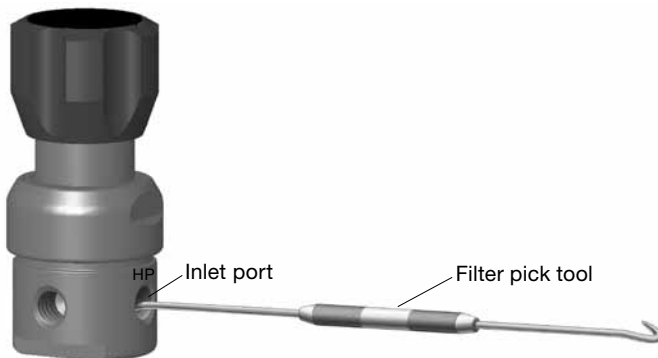

 Discard inlet filter.

2. Insert the new **inlet filter** in the **inlet port (marked 'HP')** using the **filter insertion tool**.

NOTICE

Do not insert the inlet filter with a sharp tool. Damage to the filter could result.

