- 1.) Disassemble the cover screws, set them aside, and remove cover.
- 2.) Install wiring as indicated by wiring schematic.
- 3.) When ready to reinstall the cover, inspect cover seal on the inside rim of the cover to make sure it is laying flat in the groove and has not been damaged.
- 4.) Reinstall cover. Be sure wires or foreign objects are not trapped in seal area.
- Reinstall cover screws. Torque the cover screws in a criss-cross pattern to 15-20 in. lbs.



## **Electric Actuator Installation Instructions**



- depressurize system
- cycle valve

WARNING: Residual material may be left in the valve and system.

