

Installation Instructions **for Toggle Valve Handle** **Positioner**

MS-INS-TGP
Revision B
August, 1998

Kit Contents:

Positioner
Panel Nut
Instructions

WARNING: Before servicing any installed valve, you must



- depressurize system
- cycle valve

WARNING: Residual material may be left in the valve and system.

NOTE: It is important to refer to the exploded view drawing while following the installation instructions.

1. Lift handle to open valve.
2. Place handle positioner and panel nut over handle as shown in Figure 1 and assemble to the valve body threads. Do not tighten the panel nut.
3. Close valve by lowering handle.
4. Use a screwdriver and carefully press the handle positioner into the "handle opening" of the valve.
5. Turn handle to the desired position.
6. Without moving the handle, use a wrench and hold the bottom panel nut in position while tightening the upper panel nut against the handle positioner.

© 1994, 1998 Swagelok Company

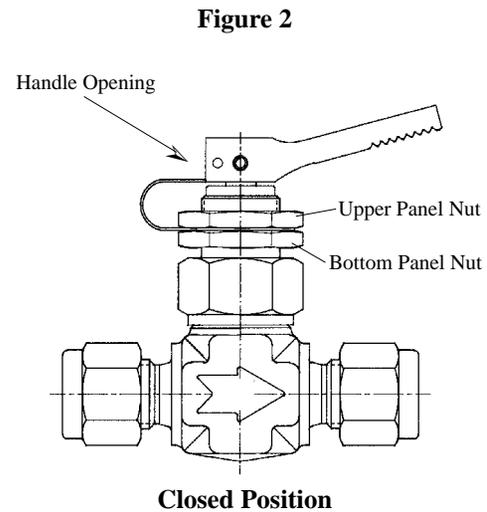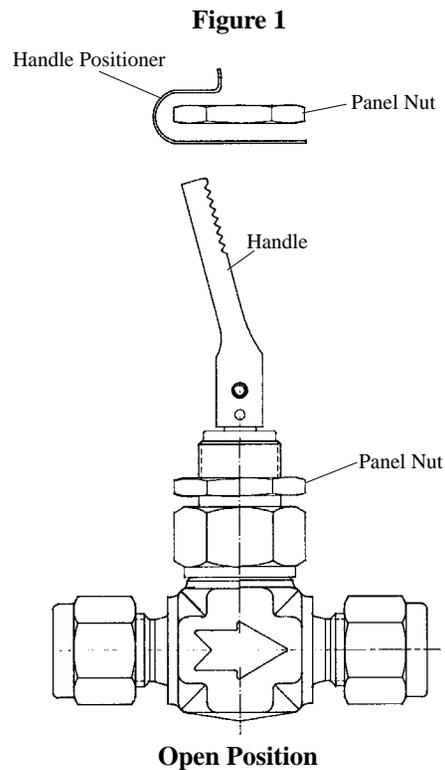

Swagelok
www.swagelok.com