



QTM Series Quick-Connects Operation Instructions

To Couple:

Align stem
with body.




Push stem
into body
until it clicks.



To Uncouple:

Push front
sleeve toward
rear sleeve.

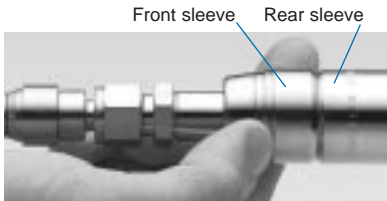

Patented

Good Practices for Operations of Swagelok Quick-Connects

- Use filters ahead of quick-connects.
- Use body and stem protectors or dust caps on uncoupled bodies and stems.
- Align bodies and stems when coupling or uncoupling.
- Couple and uncouple quick-connects at room temperature.
- Couple and uncouple quick-connects during system cleaning operations.
- Support hanging hoses or other equipment to prevent side load.
- Relubricate stem seal O-rings periodically.

Caution:

- Do not rotate while coupled.
- Do not insert foreign objects into uncoupled bodies or stems.

Ratings

| Series | Pressure | Temperature |
|-----------------|--------------------|-----------------------------|
| QTM2A | 4500 psi (310 bar) | 0 to 120°F (-17 to 48°C) |
| QTM4A and QTM8A | 3200 psi (220 bar) | |